


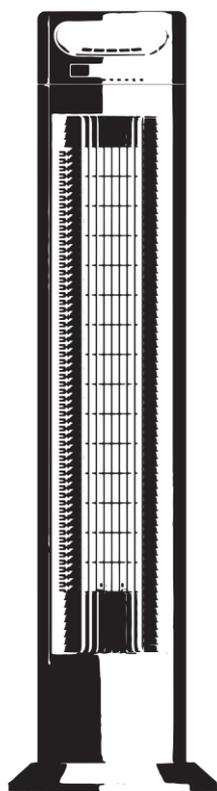

INCLINABLE TOWER FAN

-ETF 956P-



Celebrate Fine Living!

Thank you for purchasing EuropAce Inclinable Tower Fan.
For safety purpose, please read this operating instruction manual carefully before using and
keep it for future reference.

CONTENTS

Safety Precaution.....	1
Warning	1
Parts	2
Assembly Instruction	2
Battery Installation For The Remote Control	2
Operating Installations	3
Functions	4
Cleaning And Maintenance	5
Main Specification	5



SAFETY PRECAUTION

READ AND SAVE THESE INSTRUCTIONS BEFORE USING THIS FAN

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:


1. Keep electrical appliances out of reach from children. Do not let them to operate the appliances without supervision.
2. To protect against the risk of electrical shock, do not immerse the product, cord or plug into water or any other liquids.
3. This product is for household, non-commercial and indoor use only.
4. This product is not intended for use by person (including children) with reduced physical, sensory or mental capabilities unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. If the power cord or plug is damaged, it must be replaced by the service centre or a qualified service technician to avoid hazard.

WARNING - to reduce the risk of fire, electrical shock or injury to persons or property, please read and follow below instructions carefully:

- Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification marking.
- Do not operate this product if it has malfunctioned, damaged cord or plug or appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.
- This product should not be used in the immediate vicinity of water, such as bathtub, washbowls, swimming pool etc. where the likelihood of immersion or splashing could occur.
- Always switch off and unplug the plug from outlet when not in use, before assembling or disassembling parts and before cleaning. Fully assemble the set before operating.
- Avoid contacting with moving parts. Do not insert any object through the guard when the set is operating.
- Do not cover the guard or operate in close proximity to curtains, etc.

PARTS

- Tower Fan
- Front Base
- Rear Base
- Bolts (4pcs)

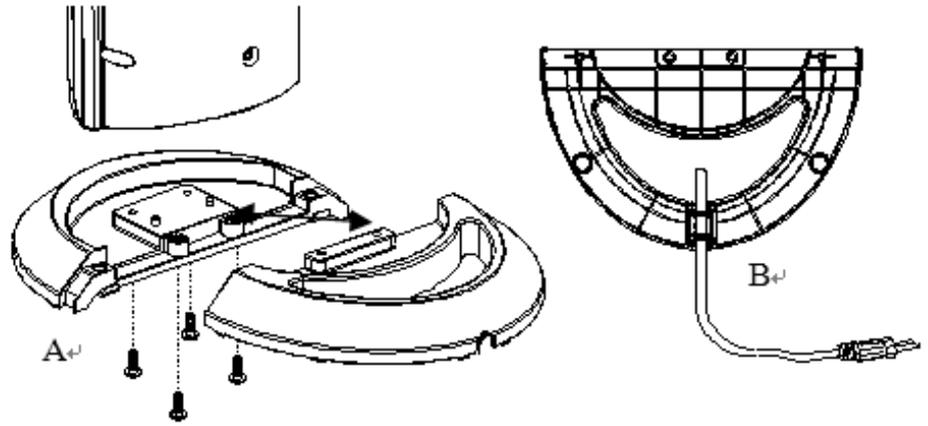

ASSEMBLY INSTRUCTION


WARNING: Always ensure the product is unplugged from the electrical outlet before relocating, assembling, disassembling, or cleaning it.

1. Remove the 4 bolts from the centre bottom of the fan body.
2. Connect the Front Base and Rear Base together and attach the assembly to the underside of the Tower using the four bolts. The base will only fit onto the Tower in one direction.
3. Place the Power Cord into the notch in the underside of the Rear Base.
4. Place the assembled Tower Fan on a flat, stable, level surface.

Battery Installation for the Remote Control:


1. Remove the Battery Compartment Cover by pressing down on it and out in the direction of the arrow.
2. Insert two "AAA" batteries (not included) according to the polarity marking inside the Battery Compartment and then replace the Battery Compartment Cover.

CAUTION: Remove the batteries when the Remote Control will not be used for an extended period.

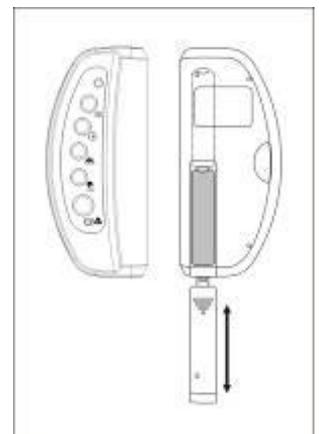

OPERATING INSTRUCTIONS

NOTICE: To avoid damage to the unit, ensure the product is fully assembled before plugging it into an electrical outlet.

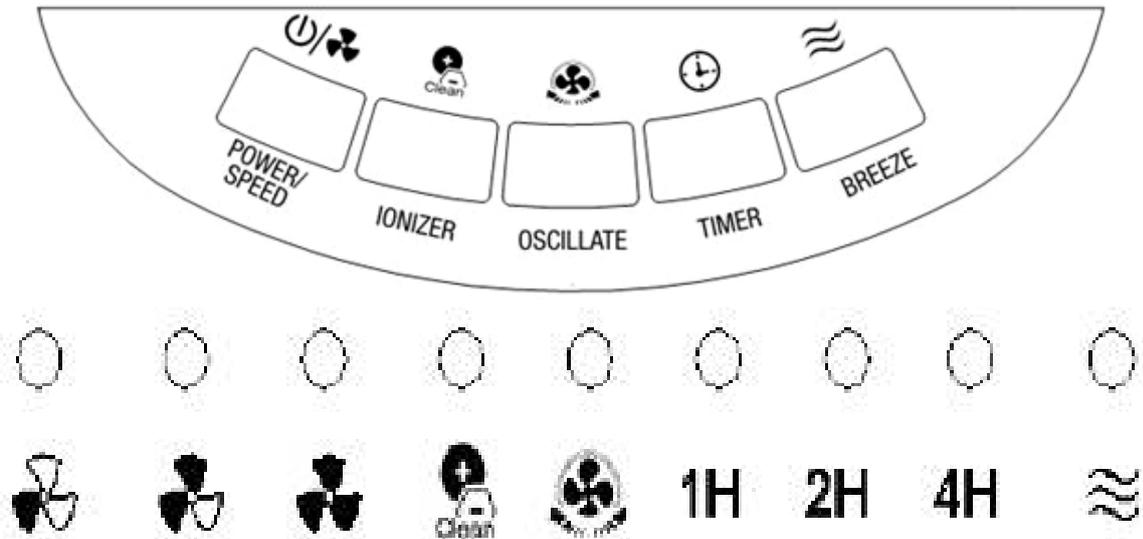


1. Plug the product into a standard 220-240-volt AC electrical outlet.
2. You can tilt the fan backwards from vertical, either 6 degrees or 12 degrees (see diagram at right), in order to circulate warmer air in the room that has risen toward the ceiling.
3. Turn on the Fan by pressing the POWER/SPEED Button on the Control Panel.
4. To set the speed of the Fan, press the POWER/SPEED Button on the Control Panel repeatedly until the Indicator Light above the corresponding speed icon appears: "☸" for High, "☸" for Medium, or "☸" for Low.

NOTICE: To avoid damaging the product, press only one Button at a time.

5. To start/stop oscillation, press the OSCILLATE Button on the Control Panel.
6. Turn off the Fan by pressing the Power Button on the Control Panel and then unplug the product from the electrical outlet.

WARNING: Unplug power cord whenever fan is not being operated. Do not leave fan unattended while it is plugged in.

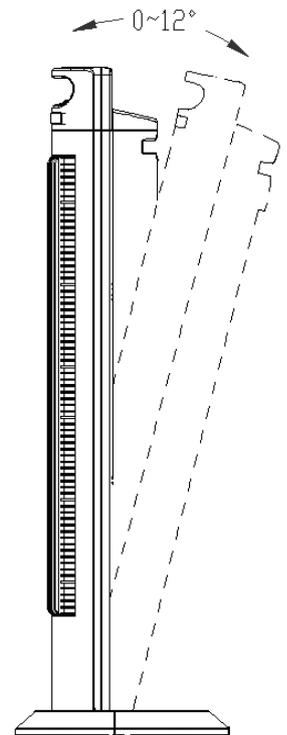

FUNCTIONS

Ionizer:

To start or stop the Ionizer Function, press the IONIZER Button on the control panel. The indicator light above the Ionizer icon  will illuminate when the function is on. When turned on, the fan will release negative ions into the air, which are attracted to and bond with positively- charged particles such as dust, smoke, and other pollutants. Once bonded, these particles become heavier and fall harmlessly to the ground, making the resulting air cleaner and fresher.

Timer:

To set the Timer Function, press the TIMER Button  on the control panel repeatedly until the desired time (up to seven hours) on the "1H", "2H", or "4H" indicator(s) appears. For example, to set the timer for three hours, press the Timer button until the indicators above both "1H" and "2H" appear. The fan will turn off after the set time has elapsed.

Breeze Mode:

To start or stop Breeze Mode, press the BREEZE button on the control panel. The indicator light above the Breeze icon  will illuminate when the function is on. Airflow will alternate among all speeds, including "OFF".

Remote Control Operation:

The Remote Control can control the same functions as the buttons on the control panel. Press the appropriate button on the remote to activate/change the desired function in the same manner as described in the "Basic Operation" and "Fan Options" sections.

Remote Control Storage

Store the Remote Control behind the Control Panel, if desired.

CLEANING AND MAINTENANCE

WARNING: To avoid the risk of electrical shock, always ensure the product is unplugged from the electrical outlet before relocating or cleaning it.

This fan has permanently lubricated during the manufacturing process and does not required further lubrication for the entire life of the product.

WARNING: Additional lubrication of electric motor parts could create a fire hazard.

Clean the exterior surface only by wiping with a soft cloth.

CAUTION: Do not use liquids or abrasive cleaners to clean the product.

CAUTION: Do not disassemble this fan for cleaning of internal parts (e.g motor), as this may result in product damage and will void the warranty.

Store the product in a cool, dry place.

MAIN SPECIFICATION

Voltage	:	220-240V/50Hz
Rated Power	:	40W
Net/Gross Weight	:	4.5/6.0KG
Product Dimensions	:	L256 x W301 x H950 (MM)
Packaging Dimensions	:	L218 x W232 x H984 (MM)

WARNING!

DO NOT ATTEMPT TO OPEN OR REPAIR THE FAN YOURSELF. DOING SO COULD VOID THE WARRANTY AND CAUSE DAMAGE OR PERSONAL INJURY

For more technical details / enquiries, please visit:

EUROPACE SERVICE CENTER

10 Changi South Street 3 #06-01 Singapore 486147

Celebrate Fine Living!

This product is distributed by Strategic Marketing (S) Pte Ltd

If there is any technical amendment for the product, it will be edited on the updated version of the instruction manual without prior notice. The pictures shown in the instruction manual is only for illustration purpose only. If the appearance or colour of the product is modified, please refer to the actual appliance as a standard.